



# Check Valve Installation Instruction

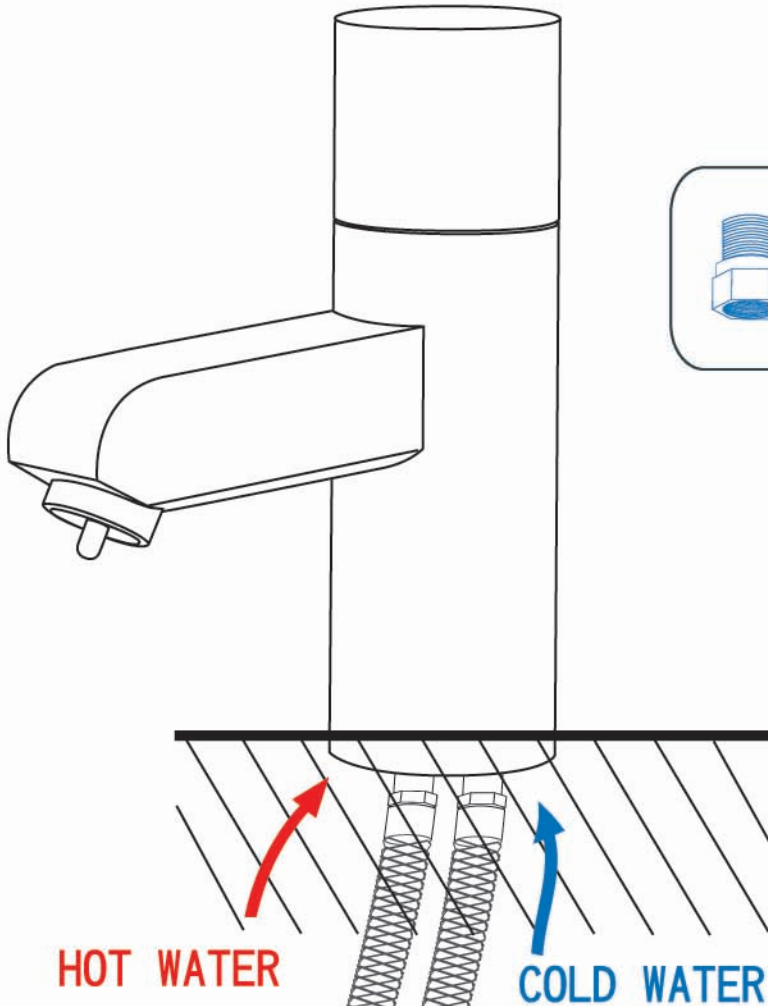

BACKWASH WILL OCCUR WHEN WATER PRESSURE IN PIPE IS OVERMUCH, AND CHECK VALVE WILL SOLVE THE PROBLEM OF BACKWASH.

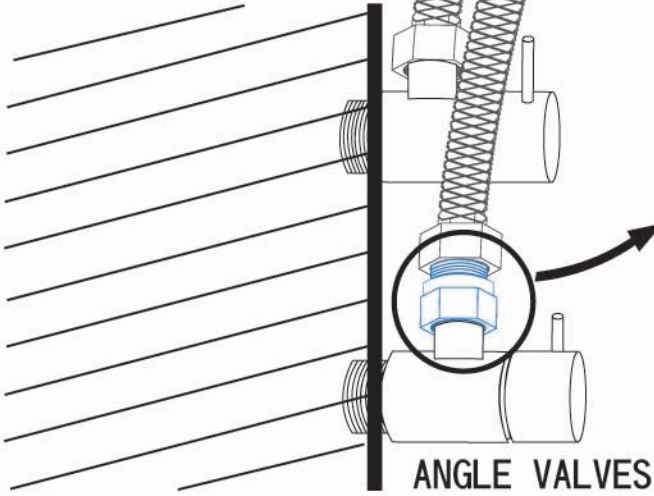


CHECK VALVE

PLEASE INSTALL CHECK VALVE BETWEEN THE COLD WATER PIPE AND ANGLE VALVES.

**ATTENTION**  
THERE IS A BLACK SEAL RING WITH CHECK VALVE, PLEASE DEVICE THE BLACK SEAL RING ACCURATELY IN THE INTERIOR OF CHECK VALVE TO PREVENT THE WATER LEAKING.

# 過濾逆止閥安裝說明

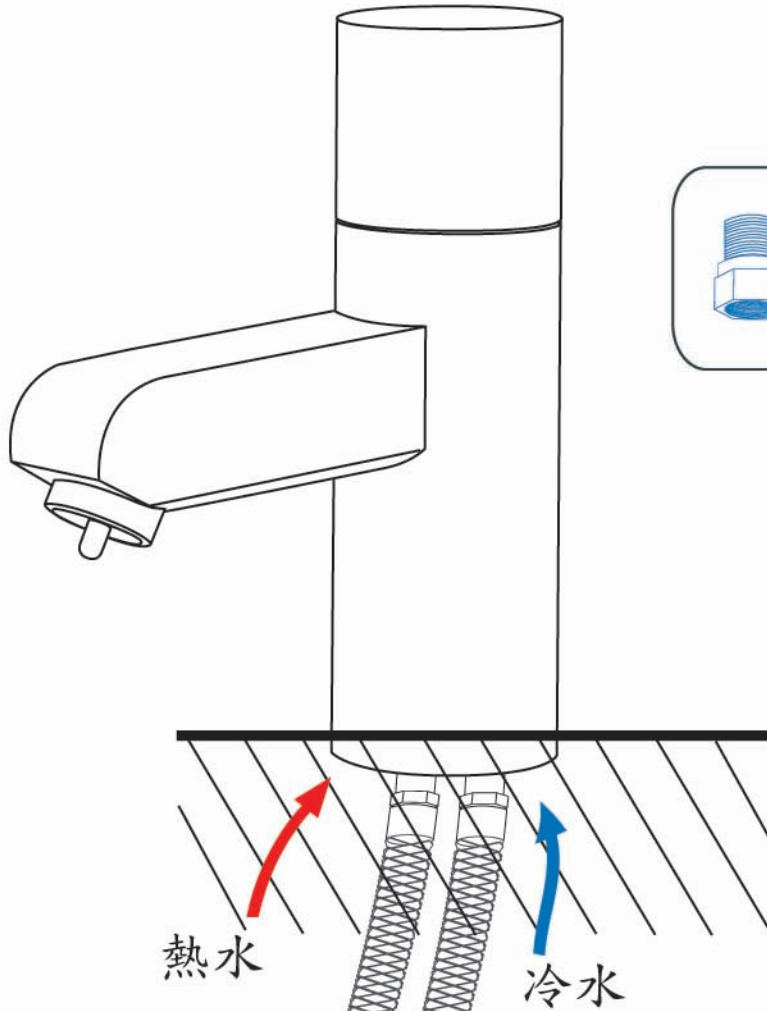

過濾逆止閥


熱水

冷水

管路內水流或壓力過大將產生逆流現象，過濾逆止閥會將逆流的水流止住，避免管路壓力相關問題

過濾逆止閥

請安裝在冷水管路跟壁面三角閥的接頭之間

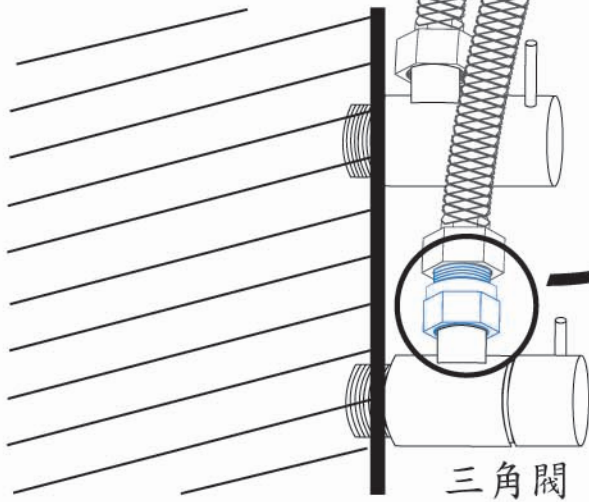

三角閥

注意事項

過濾逆止閥內含有一黑色墊圈，應正確安裝於逆止閥內部，避免掉出或歪斜，以防漏水